


RACCORDI A SALDARE

Welding fittings • Schweissfittings • Raccords à souder • Racores para soldar



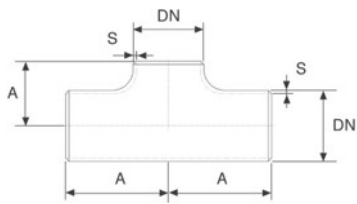

200 ISO

TEE NORMALE DA TUBO SS

- SEAMLESS TEE
- NAHTLOSE T-STÜCK
- TEE SANS SOUDURE
- TE IGUAL SIN SOLDADURA

MATERIAL: P235GH (R.St.35.8/l)

NORM: EN 10253-2 (DIN 2615-1 serie 3)

CODE	DN	DN inch	DN mm	S mm	A mm		
200213001	15	1/2"	21,3	2	25	0,1	1
200269001	20	3/4"	26,9	2,3	29	0,16	1
200337001	25	1"	33,7	2,6	38	0,3	1
200424001	32	1"1/4	42,4	2,6	48	0,5	1
200483001	40	1"1/2	48,3	2,6	57	0,7	1
200603001	50	2"	60,3	2,9	64	1,1	1
200761001	65	2"1/2	76,1	2,9	76	1,7	1
200889001	80	3"	88,9	3,2	86	2	1
200114001	100	4"	114,3	3,6	105	3,5	1
200139001	125	5"	139,7	4	124	5,5	1
200168001	150	6"	168,3	4,5	143	8	1
200219001	200	8"	219,1	6,3	178	17	1
200273001	250	10"	273	6,3	216	26,5	1
200323001	300	12"	323,9	7,1	254	42	1
200355001	350	14"	355,6	8	279	71	1
200406001	400	16"	406,4	8,8	305	85	1

Tolleranze dimensionali / Dimensional tolerances

$D = \pm 1\% D \text{ MIN } \pm 0,5 \text{ mm}$

$S = S \leq 4 \text{ mm } (-12,5\% \times S / +20\% \times S) \quad S > 4 \text{ mm } (-12,5\% \times S / +15\% \times S)$

$A = \pm 2 \text{ mm } \leq \text{DN } 200 \pm 3 \text{ mm } > \text{DN } 200 \div 400$